

Quick Start Guide

(8200-1937-08_B0)

Flex Gen 3
Indoor Dome camera
Indoor recess mount accessory

The IBCR-F-WT-0 recess mount is used to install the FG3 Indoor Dome camera to an indoor suspended ceiling

In the box

- 1 x Recess mount housing
- 1 x Safety bracket
- 1 x Safety wire
- 1 x Mounting template sticker
- 3 x '10x3mm' mounting plate screws
- 5 x '13x4mm' tapping screws
- 1 x Camera mounting bracket
- 1 x Printed Quick Start Guide

Installation tools

- 1 x Screw driver
- 1 x drill



Installing the recess mount to a suspended ceiling

1. Attach the mounting template sticker to the ceiling tile and cut out a large hole as per the markings identified on the mounting template.
2. Align the three holes on the camera mount bracket (1) (Figure 1) with the three holes on the recess mount housing (2) (Figure 2).

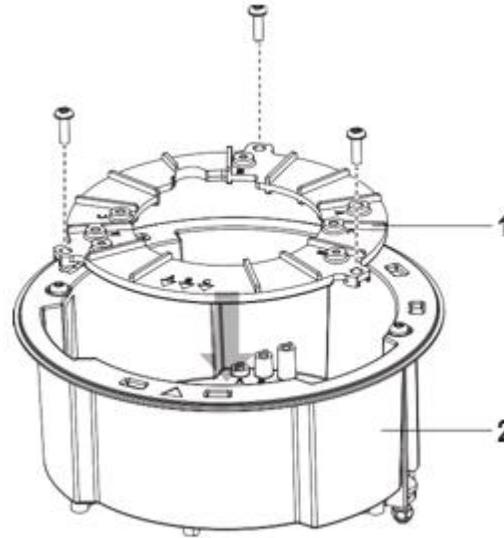


Figure 1

Installing the recess mount to a suspended ceiling (continued)

4. Securely attach the safety bracket to a secure structure (such as an anchor bolt) within the ceiling.
5. Securely attach one end of the safety wire (1) (Figure 3) to the safety bracket.
6. Securely attach the other end of the safety wire to the recess mount housing (2) (Figure 3).

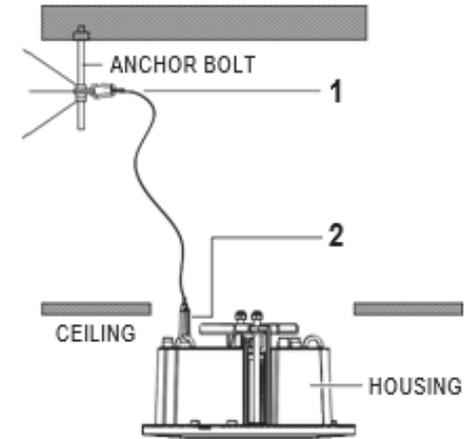


Figure 3

Installation instructions

1. Ensure that the installation anchor within the ceiling can hold more than five times the total weight of the indoor recess mount (394g).
2. At least 250mm or more of space is required above the ceiling board.
3. Ensure that the safety wire is securely attached at one end to a secure anchor within the ceiling and on the other end to the camera so that the camera cannot fall.
4. Use only the provided screws to install the mount bracket and camera.

Installing the recess mount to a suspended ceiling (continued)

3. Insert the three '13x4mm' screws into the three holes and securely attach the camera mount bracket to the recess mount housing.
Note: When installing the camera mount bracket, ensure that the guided holes in the recess mount housing are appropriate for the camera size. See Figure 2.
Note: Model IFS03-D21-AT03, IFS08-D22-AT03 uses the "C" hole to assemble.

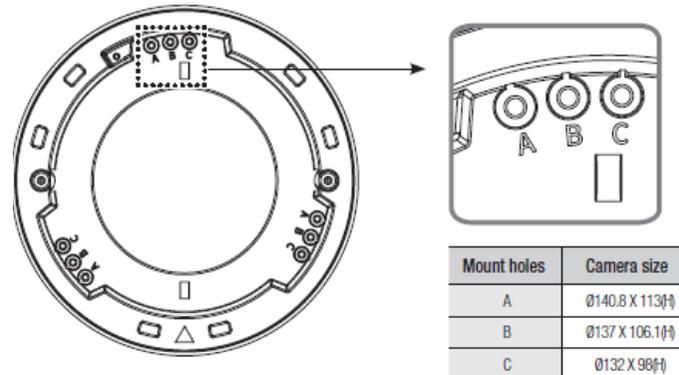


Figure 2

Installing the recess mount to a suspended ceiling (continued)

7. Pass the external cable (1) (Figure 4) through the hole in the center of the recess mount housing.

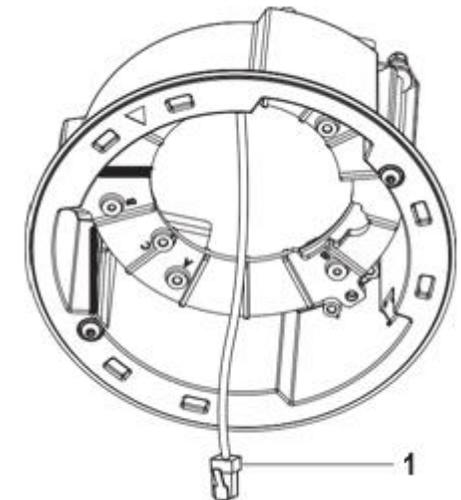


Figure 4

Installing the recess mount to a suspended ceiling (continued)

8. Place the recess mount housing inside the ceiling hole and tighten the two screws (1) (Figure 5) to fix the recess mount housing to the ceiling.

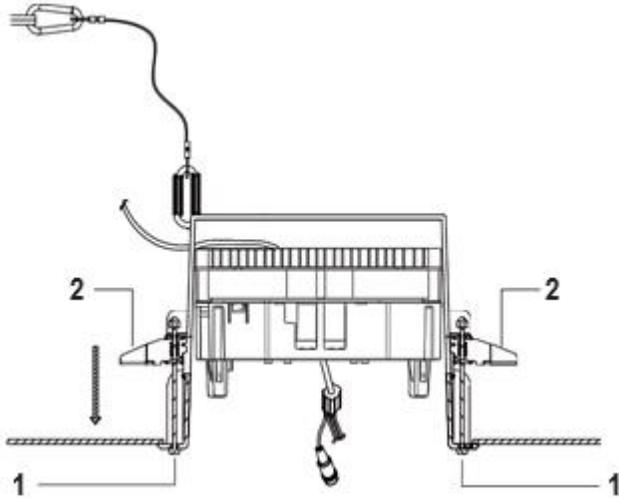


Figure 5

Installing the recess mount to a suspended ceiling (continued)

12. Insert the two screws (that come with the camera) into the two holes and securely attach the camera to the recess mount housing.
13. Securely attach the recess mount top cover (1) (Figure 7) to the recess mount housing.

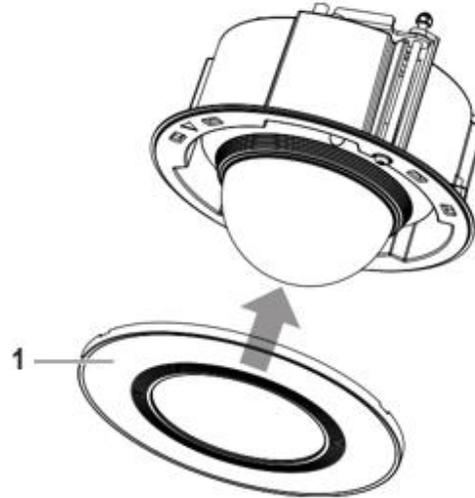


Figure 7

Installing the recess mount to a suspended ceiling (continued)

9. Pull both brackets (2) (Figure 5) down fully onto the ceiling.
10. Hold the camera up to the recess mount housing and connect the power cable to the camera.
11. Insert the camera (1) (Figure 6) into the recess mount housing and align the two holes on the camera with the two holes (C) (Figure 2) within the recess mount housing.

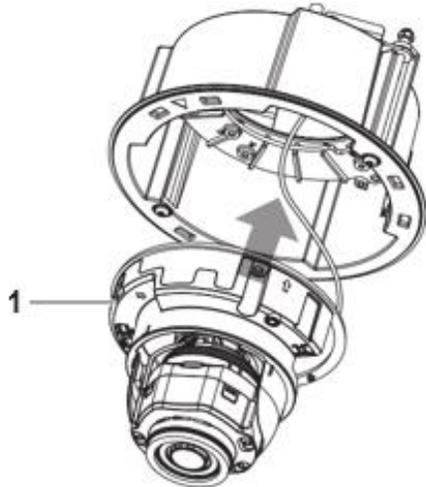


Figure 6

Warnings

- Ensure to install the mounting back box and camera on an area strong enough to support more than four times the total weight of this product and the camera.