



SC/UPC SPARC Rapid Linc Mechanical Connector Operating Instructions

Part# SRL-SCU/10


1 - Insert Cable into Screw Cap

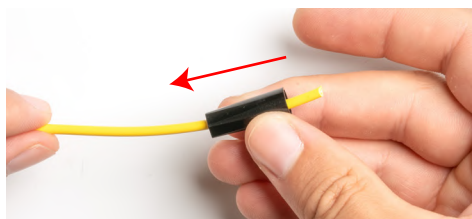

2 - Cutting Length

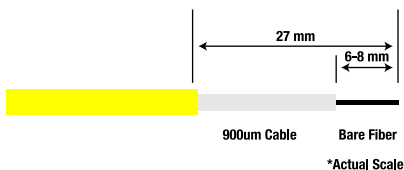


3 - Strip Outer Jacket with JIC-375

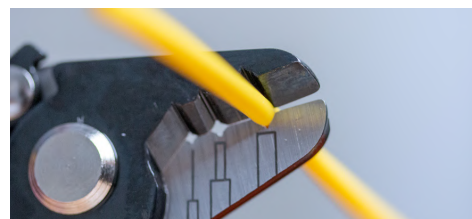

4 - Strip Cable with JIC-375




5 - Strip Fiber with JIC-375

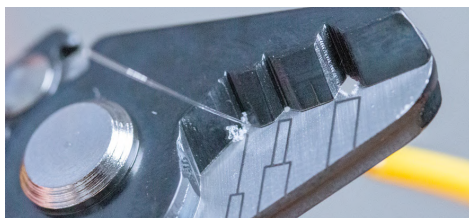


6 - Clean the Bare Fiber with FW-5




7 - Fiber Check

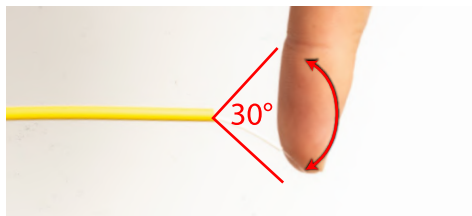


8 - Cleave Fiber with FC-600

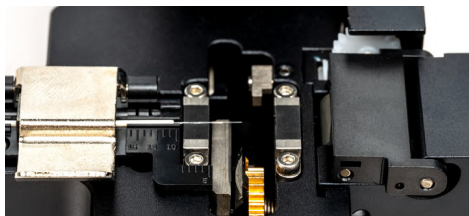


9 - Insert Boot

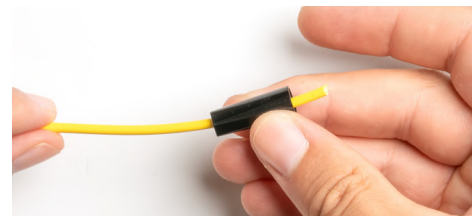


10 - Insert Fiber

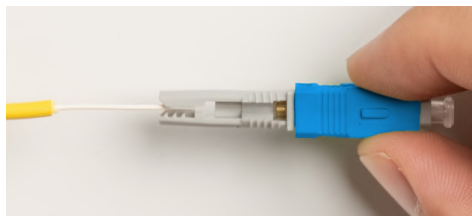

11 - Fasten the Boot

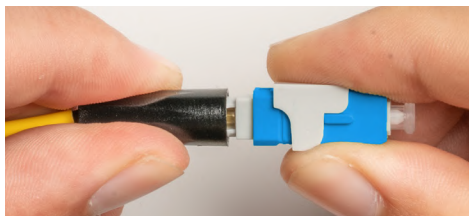

12 - Take Off Aid

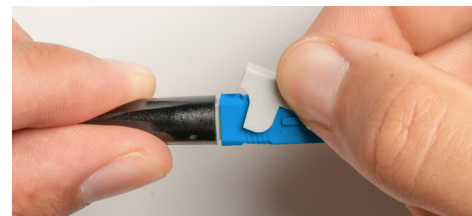


Reuse

1 - Fix Aid



2 - Release Boot & Cut Fiber

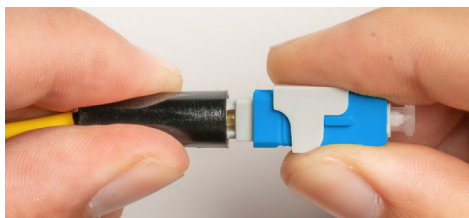

3 - Begin to Install Again

