



Overview

Used as a connector to connect optional brackets, such as brackets from DynaColor.

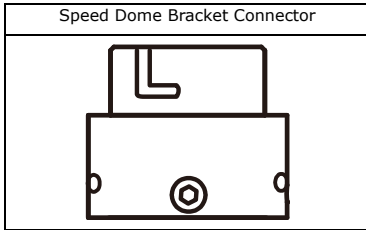

Dimension (mm)

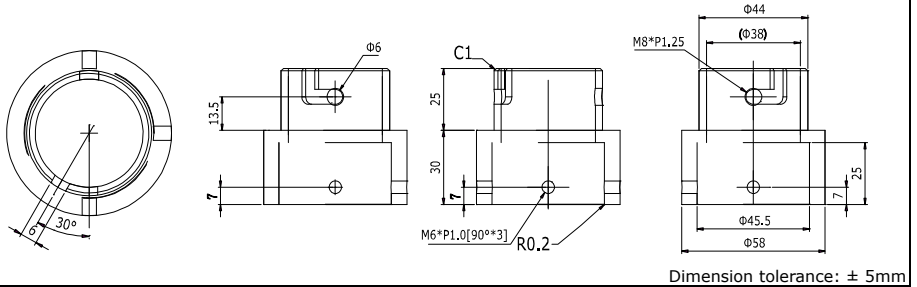

Installation

Step 1: Align the track on the housing to wear the connector and screw the connector to lock as Pic 1.

Step 2: Tighten the two screws with supplied wrench as Pic 2.

Note: If you want to lock much tightly, we reserve a screw hole for you to purchase a proper screw to lock.

Step 3: Connect the housing with PTZ connector to the bracket.

